



ICAO

SAFETY

# Frequency Finder

## 1 Installing, Start page, Home page



Workshop

Peru, Lima, 6 – 10 March 2017

Presented by

Loftur Jonasson ICAO/HQ

Robert Witzen



# Introduction

- Frequency Finder has been developed with FileMaker 13 Pro Advanced
- Frequency assignment planning criteria as per Handbook Volume II implemented
- Module for VHF COM frequency assignments completed
- Module for SSR Mode S II Codes in progress
- Global COM list 3 and Table of SSR Mode S II Codes are maintained by Regional Offices
- Assess compatibility of frequency assignments
- Graphical interface with Google Earth



# Installing Frequency Finder Runtime

- Download from the FSMP website the zip-file *FF2017.1.R* ([www.icao.int/safety/fsmp/documents/frequencyfinder](http://www.icao.int/safety/fsmp/documents/frequencyfinder))
- Remove earlier version of Frequency Finder, if any.
- Unzip and run the installer file FF2017.1 R.exe
- Select to create desktop icon
- Download and install Google Earth
- More details in the User Manual :  
*Installing Frequency Finder*  
*(Run-time version)*






# Open Frequency Finder

## Start page


- User manual
- Sync Manual
- Active Region
- Web sites
- Module VHF COM
- Modules SSR Mode S II Code

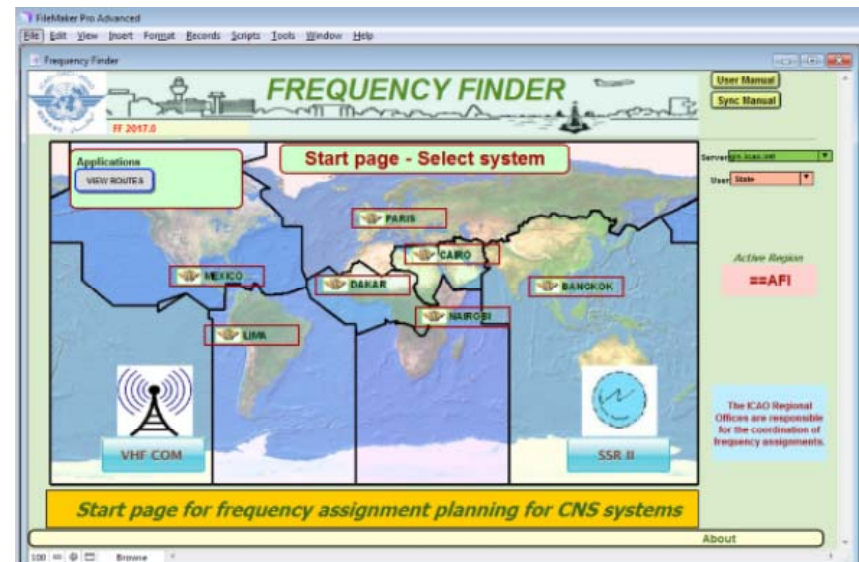

# Start page → Home page VHF COM

- Navigate to Home Page: Automatic Connection Test and check if the COM list 3 was modified
- Also with button Check Sync
- Dialog box is displayed if a download synchronization is necessary

- Message field
- Download button
- Back-up and Recovery

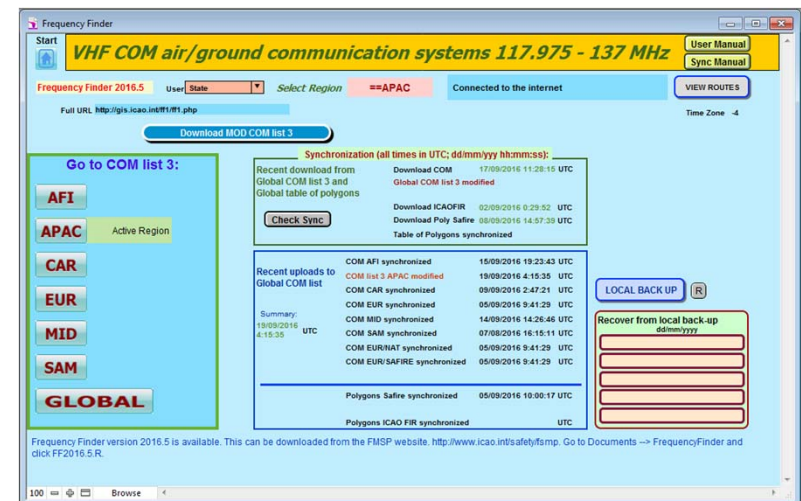



# Home Page VHF COM list 3

## Back-up and recovery

- Click “LOCAL BACK UP” to create a backup
- Back-up # is added to the list
- Click relevant back-up # (1 – 5) to recover
- Backup: Table COM list 3  
Table Polygons  
Table Historical  
Home Page
- See user manual 4.4.4.2 to recover from a back-up created with an earlier version of Frequency Finder

